

# Instructions for Installation

## Temperature sensor, TBLZ-1-25-2/MIRUVENT

### 1. General


The sensor is intended for wall mounting and is equipped with a screw terminal connection for a cable.

### 2. Range of Application

The outdoor sensor is designed for measuring the outdoor air temperature or the room temperature.. It is used for offsetting the pressure or airflow setpoint.

### 3. Installation

Secure the sensor to an exterior wall by means of two screws. Note that the sensor should be mounted with the cable gland facing downward. Position the sensor at a representative point of measurement. Avoid sources of interference such as direct solar radiation, exhaust air discharge and the like.

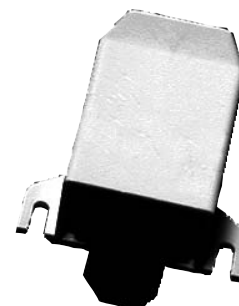

TBLZ-1-25-2

### 4. Technical data

Dimensions (W x H x D)	52x55x27 mm
Enclosure class	IP 43
Range of measurement	-50 °C – +70 °C

## 5. Electrical connections

The electrical connections should be wired by a qualified electrician in accordance with local electrical safety regulations.

