

Swegon CASATM Ktlavs

FIC201-121-10

2009.06.04


Instructions for the operation and maintenance of the Swegon CASA Ktlavs cooker hood with timer

Important!

The cooker hood is connected to a central ventilation system.

A house with a central ventilation system is constantly ventilated, and the timer can be used for temporarily increasing the air volume extracted via the cooker hood.

Caution: Flambéing food below the cooker hood is not permitted!

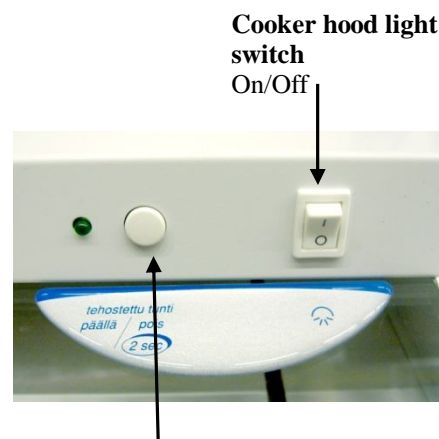

Timer button for the cooker hood's shut-off damper (electrically operated)

When cooking, the ventilation capacity of the cooker hood is increased by pressing the timer button. The indicating lamp lights up and an electric motor opens the shut-off damper. The damper closes automatically after 60 minutes or when you press and hold the timer button pressed in for more than two seconds.

Maintenance

Clean the cooker hood regularly with dishwashing detergent. Use a suitable detergent for cooker hoods with stainless steel surfaces. Never use aggressive detergent.


Filter

The filter can be removed and washed by hand with dishwashing detergent or in a dishwasher.

Fluorescent lamp

If the lamp needs to be replaced, remove the screws that secure the glass cover, remove the cover and pull the lamp out of its holder.

Type of fluorescent lamp: PL 9 (9 W)

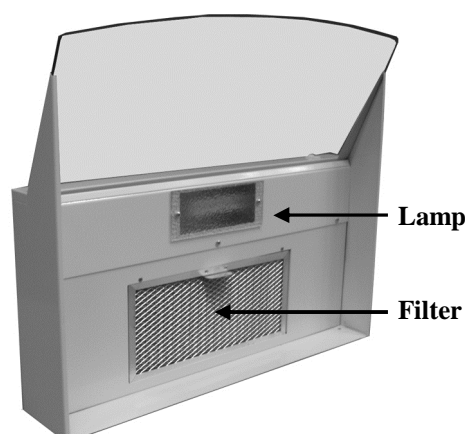

Swegon

www.swegon.com/casa